


# EXCLUSIVE BOARD | EXCLUSIVE



#### **COMPONENTS**

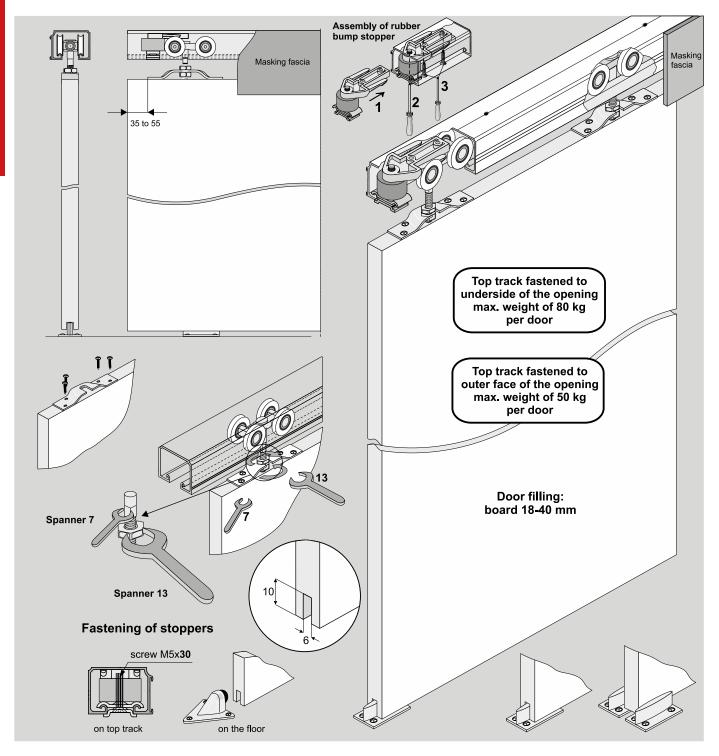









**ASSEMBLY INSTRUCTIONS** 







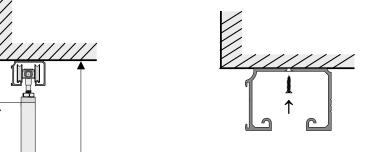


### Board height hb:

 $h_b = H - 64 \ mm$ H - door height

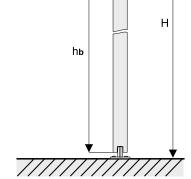


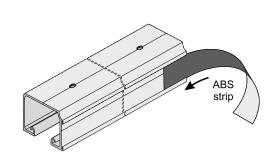


### 2. Track outside the opening

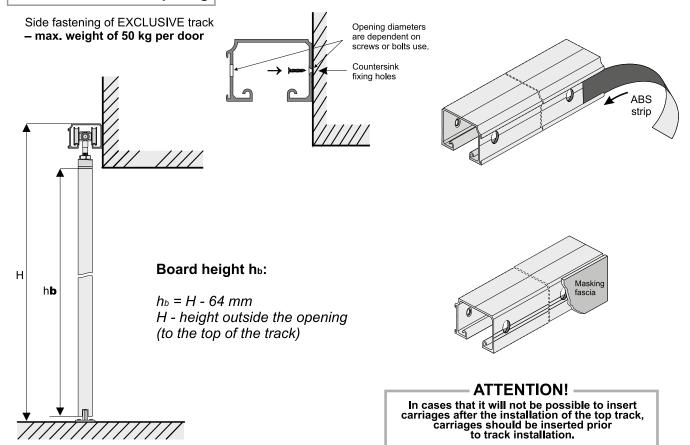


## **EXCLUSIVE BOARD** | PORTO GM, PROSPER GM

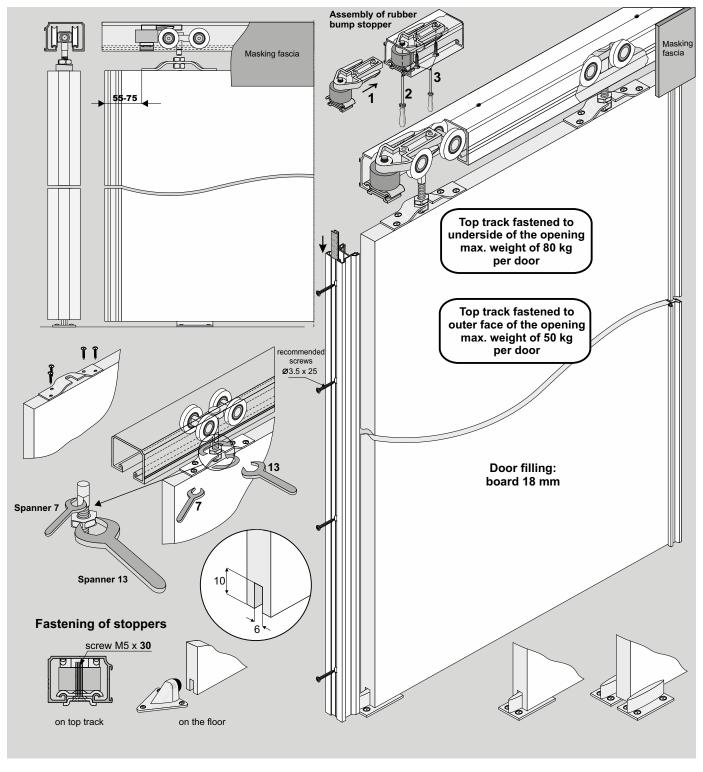

#### **COMPONENTS**

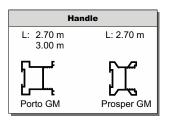









Dimensions of opening		Handle length = door height	
		LINE PORTO GM	LINE PROSPER GM
	Н	Handle Porto GM  textile door stop (inserted) 14 mm x 4 mm	Handle Prosper GM  textile door stop (inserted) 14 mm x 4 mm
assumed door width - wz		WZ	WZ
board height	- hb	hb = H - 64 mm	hb = H - 64 mm
board width	- wb	wb = wz - 41 mm	wb = wz - 31 mm

