


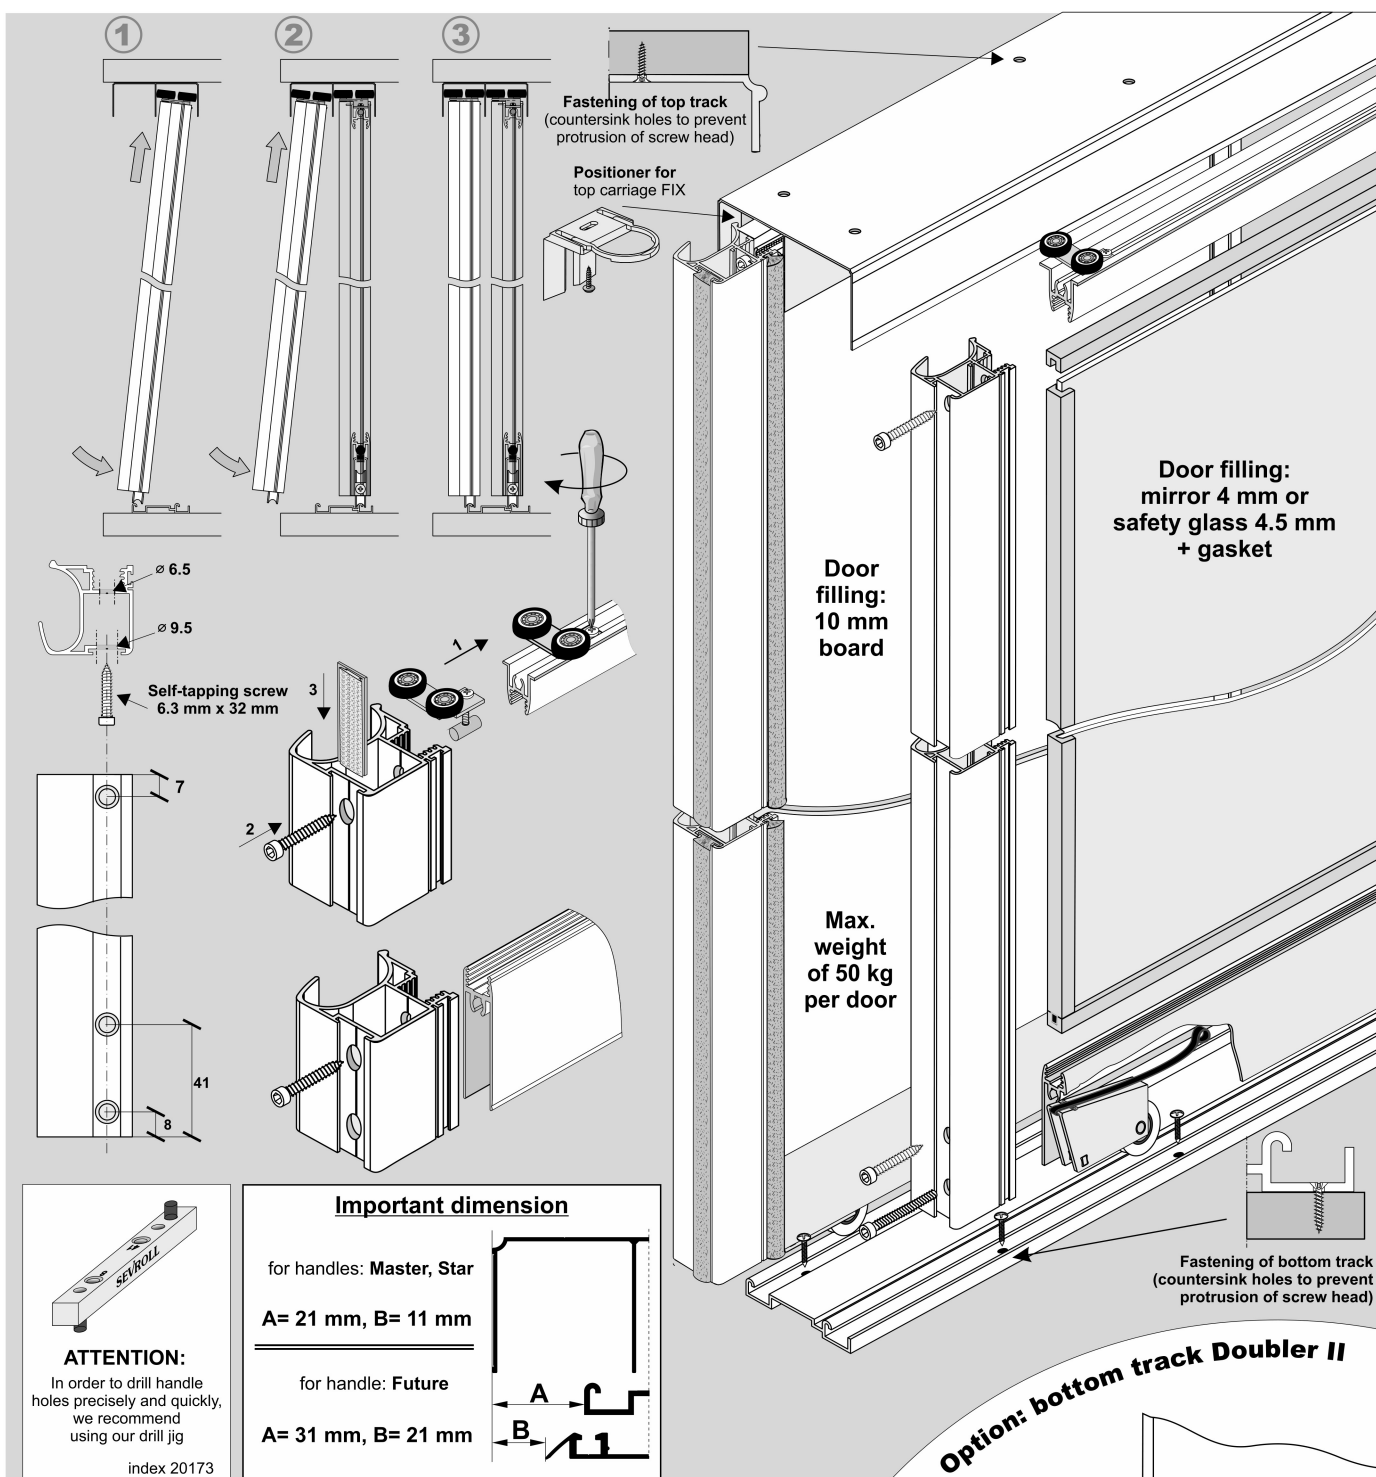


COMPONENTS


Handle			Horizontal profile	
L: 2.70 m 3.50 m	L: 2.70 m 3.00 m	L: 2.70 m	Decor 10 (A)	Upper horizontal profile
			Decor 10 (B)	
FUTURE II	MASTER	STAR	L: 1.70 m, 2.35 m, 3.00 m	L: 1.70 m, 2.35 m, 3.00 m
Guiding carriage	Bottom carriage	Top track	Bottom track	
FUTURE or MASTER	WD10C HI-TEC	Comfort-Decor	Comfort	
		L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m 94 mm	L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m 62 mm	




You must remember to purchase self-tapping screws to construct each door (4 screws per door). When using safety glass or mirror, you must also remember to purchase gasket.

Option: bottom track Doubler II



With System Comfort 10 you may use bottom track Doubler II with covering strip along with bottom carriage WD10V HI-TEC. Fitting measurements are not affected.

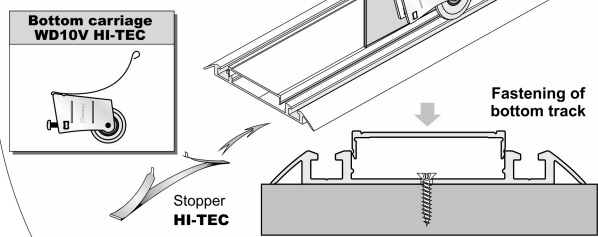


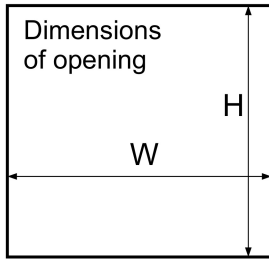

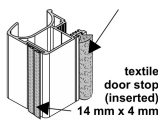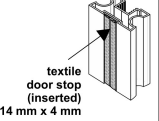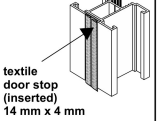Handle length = door height					
LINE FUTURE		LINE MASTER		LINE STAR	
Handle Future II anti-dust brush (inserted) 4.8 mm x 13 mm	Guiding carriage FUTURE	Handle Master	Guiding carriage MASTER	Handle Star	Guiding carriage MASTER
					
h = H - 40 mm		h = H - 40 mm		h = H - 40 mm	
Mini SV25/40/60 SV-25/50	h = H - 40 mm	Mini SV25/40/60 SV-25/50	h = H - 40 mm	Mini SV25/40/60 SV-25/50	h = H - 40 mm
Top SV60/80, Central SV25/40	h = H - 44 mm	Top SV60/80, Central SV25/40	h = H - 44 mm	Top SV60/80, Central SV25/40	h = H - 44 mm
hb = h - 64 mm		hb = h - 64 mm		hb = h - 64 mm	
w = (W - 3 mm + Z) : N		w = (W - 3 mm + Z) : N		w = (W - 3 mm + Z) : N	
wb = w - 51 mm		wb = w - 25 mm		wb = w - 40 mm	
L = U = w - 68 mm		L = U = w - 42 mm		L = U = w - 57 mm	
hl = hb		hl = hb		hl = hb	
wl = wb - 4 mm		wl = wb - 4 mm		wl = wb - 4 mm	

number of doors	- N	2	3	4	5	2	3	4	5	2	3	4	5
total overlap	- Z	37 mm	74 mm	111 mm	148 mm	22 mm	44 mm	66 mm	88 mm	30 mm	60 mm	90 mm	120 mm


visual design – 4 wings			
	$w = (W - 3 + 111) : 4$	$w = (W - 3 + 66) : 4$	$w = (W - 3 + 90) : 4$
	$w = (W : 2 + 34) : 2$	$w = (W : 2 + 19) : 2$	$w = (W : 2 + 27) : 2$

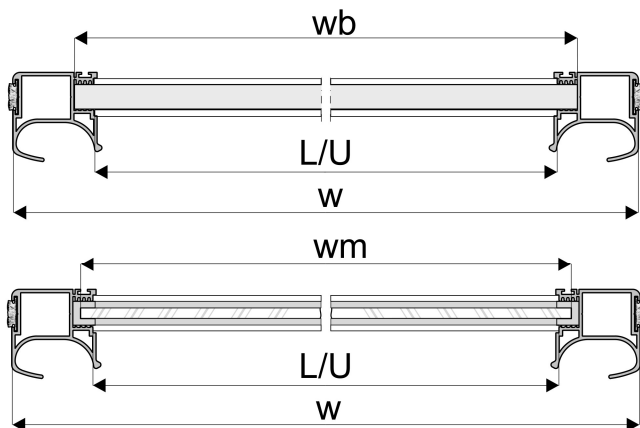

ATTENTION!

Mirror (4 mm) should be used with a safety backing film. Safety glass (4.5 mm) comprises of two thin layers with a film in-between. Both mirror and glass need fitting gaskets U.

Installation method for fitting 10 mm board (diag. A) and 4 mm mirror or glass (diag. B)

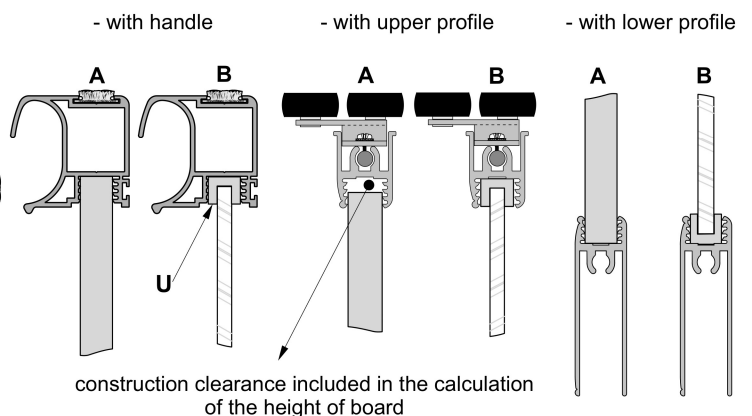

construction clearance included in the calculation of the height of board