


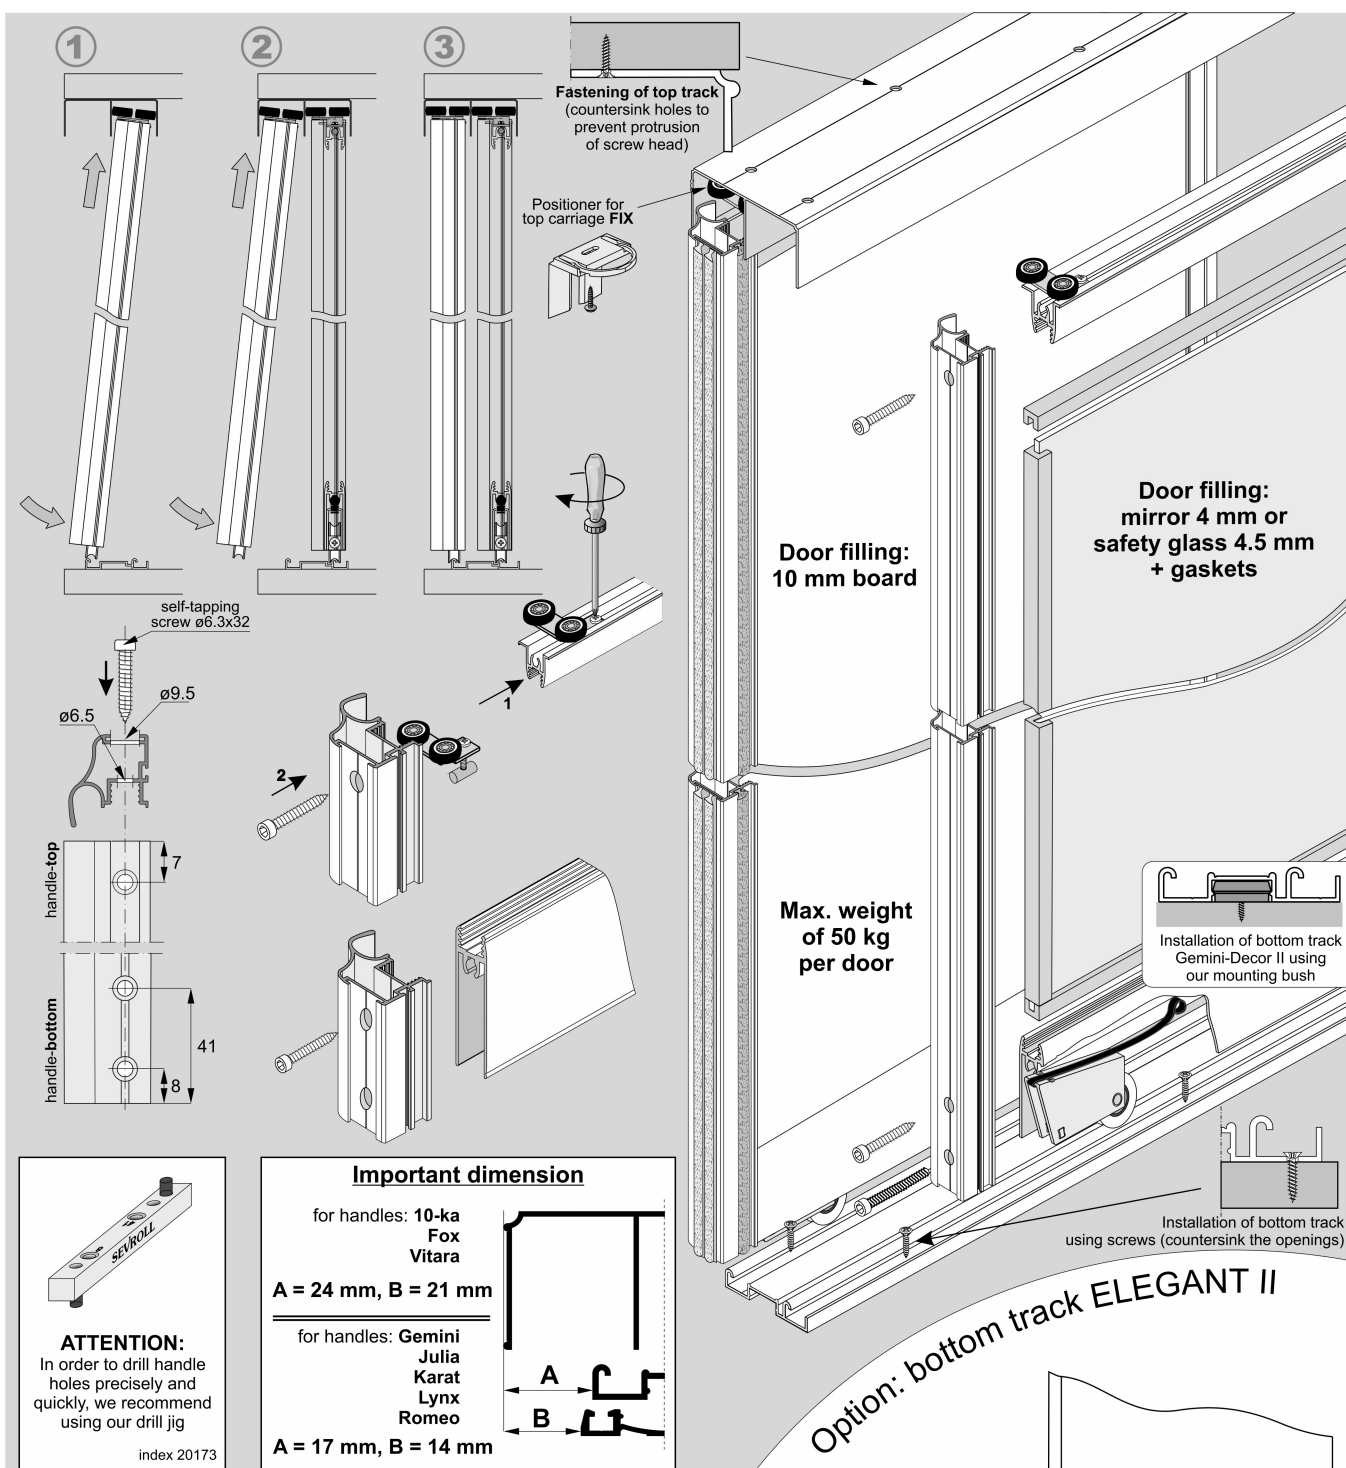



COMPONENTS




Handle					Lower horizontal profile Decor 10 (A)		Upper horizontal profile Decor 10 (B)	
L: 2.70 m								
 10-ka					FOX		VITARA	
 GEMINI					 ROMEO		 JULIA	
 KARAT					 LYNX		L: 1.70 m 2.35 m 3.00 m	
L: 1.70 m 2.35 m 3.00 m					L: 1.70 m 2.35 m 3.00 m		L: 1.70 m 2.35 m 3.00 m	
Guiding carriage		Bottom carriage WD10C HI-TEC		Top track Gemini-Dekor		Bottom track Gemini-Dekor II		
10-ka or GEMINI				L: 1.70 m, 2.35 m 3.00 m, 4.05 m 6.00 m  76 mm		L: 1.70 m, 2.35 m 3.00 m, 4.05 m 6.00 m  53 mm		

You must remember to purchase self-tapping screws to construct each door (4 screws per door). When using safety glass, you must also remember to purchase gaskets.

With Gemini 10 set you may use bottom track Elegant II with covering strip along with bottom carriage WD 10V HI-TEC. Fitting measurements are not affected.

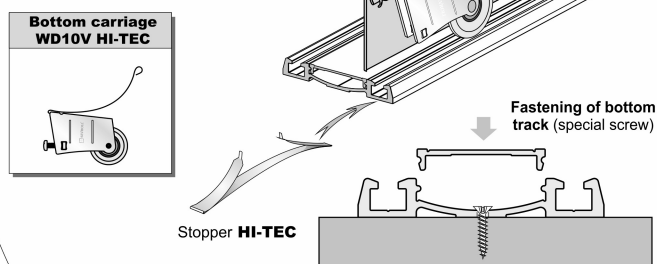


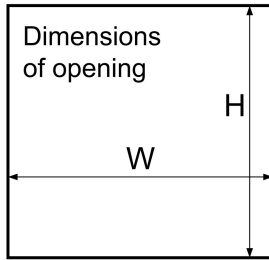

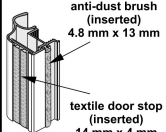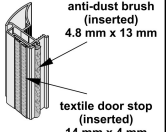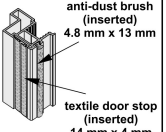
Handle length = door height											
LINE 10-ka				LINE FOX				LINE VITARA			
Handle 10-ka II		Guiding carriage 10-ka		Handle Fox II		Guiding carriage 10-ka		Handle Vitara		Guiding carriage 10-ka	
											
h = H - 40 mm				h = H - 40 mm				h = H - 40 mm			
Mini SV25/40/60 SV-25/50		h = H - 40 mm		Mini SV25/40/60 SV-25/50		h = H - 40 mm		Mini SV25/40/60 SV-25/50		h = H - 40 mm	
Top SV60/80, Central SV25/40		h = H - 44 mm		Top SV60/80, Central SV25/40		h = H - 44 mm		Top SV60/80, Central SV25/40		h = H - 44 mm	
hb = h - 64 mm				hb = h - 64 mm				hb = h - 64 mm			
w = (W - 3 mm + Z) : N				w = (W - 3 mm + Z) : N				w = (W - 3 mm + Z) : N			
wb = w - 36 mm				wb = w - 20 mm				wb = w - 20 mm			
L = U = w - 53 mm				L = U = w - 37 mm				L = U = w - 36 mm			
hm = hb				hm = hb				hm = hb			
wm = wb - 4 mm				wm = wb - 4 mm				wm = wb - 4 mm			

number of doors	- N	2	3	4	5	2	3	4	5	2	3	4	5
total overlap	- Z	35 mm	70 mm	105 mm	140 mm	36 mm	72 mm	108 mm	144 mm	20 mm	39 mm	59 mm	78 mm

visual design – 4 wings			
	$w = (W - 3 + 105) : 4$	$w = (W - 3 + 108) : 4$	$w = (W - 3 + 59) : 4$
	$w = (W : 2 + 32) : 2$	$w = (W : 2 + 33) : 2$	$w = (W : 2 + 17) : 2$

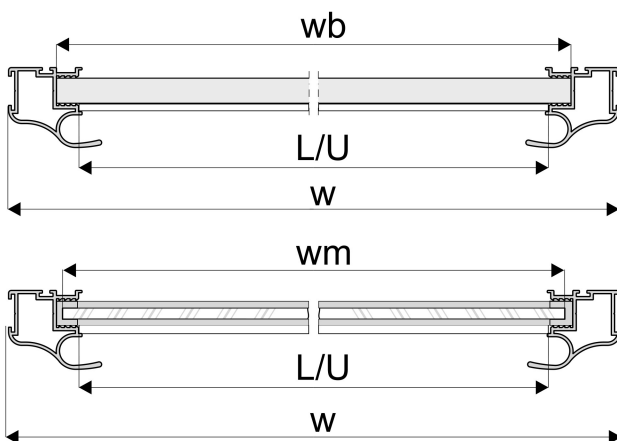


Installation method for fitting 10 mm board (diag. A) and 4 mm mirror or glass (diag. B)

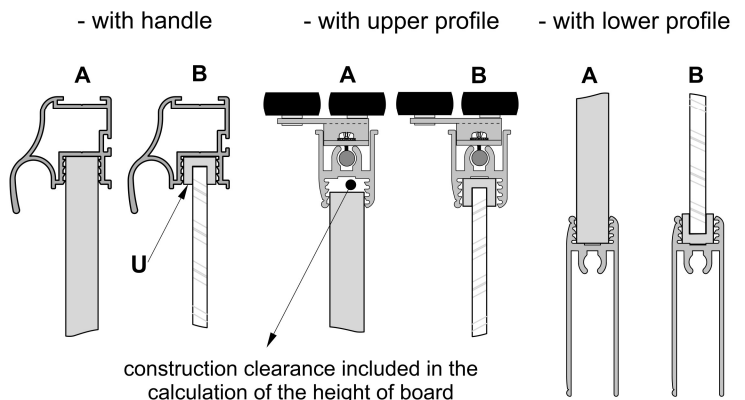

ATTENTION!

Mirror (4 mm) should be used with a safety backing film. Safety glass (4.5 mm) comprises of two thin layers with a film in-between. Both mirror and glass need fitting gaskets U.

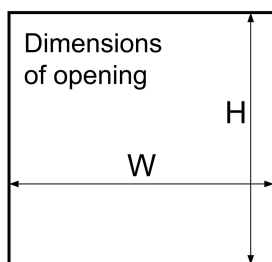


Handle length = door height

Dimensions of opening		LINE GEMINI				LINE JULIA/ROMEO				LINE KARAT/LYNX			
		Handle Gemini-Decor textile door stop (inserted) 14 mm x 4 mm		Guiding carriage Gemini L/P		Handle Julia II Handle Romeo II textile door stop (inserted) 14 mm x 4 mm		Guiding carriage Gemini L/P		Handle Karat Handle Lynx textile door stop (inserted) 14 mm x 4 mm		Guiding carriage Gemini L/P	
door height - h		h = H - 40 mm				h = H - 40 mm				h = H - 40 mm			
door wing height with soft-close fitted		Mini SV25/40/60 SV-25/50		h = H - 40 mm		Mini SV25/40/60 SV-25/50		h = H - 40 mm		Mini SV25/40/60 SV-25/50		h = H - 40 mm	
		Top SV60/80, Central SV25/40		h = H - 44 mm		Top SV60/80, Central SV25/40		h = H - 44 mm		Top SV60/80, Central SV25/40		h = H - 44 mm	
board height - hb		hb = h - 64 mm				hb = h - 64 mm				hb = h - 64 mm			
door width - w		w = (W - 3 mm + Z) : N				w = (W - 3 mm + Z) : N				w = (W - 3 mm + Z) : N			
board width - wb		wb = w - 46 mm				wb = w - 25 mm				wb = w - 41 mm			
lower horizontal profile length - L		L = U = w - 62 mm				L = U = w - 42 mm				L = U = w - 58 mm			
upper horizontal profile length - U													
mirror height - hm		hm = hb				hm = hb				hm = hb			
mirror width - wm		wm = wb - 4 mm				wm = wb - 4 mm				wm = wb - 4 mm			
number of doors - N		2	3	4	5	2	3	4	5	2	3	4	5
total overlap - Z		32 mm	64 mm	96 mm	128 mm	22 mm	44 mm	66 mm	88 mm	30 mm	60 mm	90 mm	120 mm


visual design – 4 wings

	$w = (W - 3 + 96) : 4$	$w = (W - 3 + 66) : 4$	$w = (W - 3 + 90) : 4$
	$w = (W : 2 + 29) : 2$	$w = (W : 2 + 19) : 2$	$w = (W : 2 + 27) : 2$

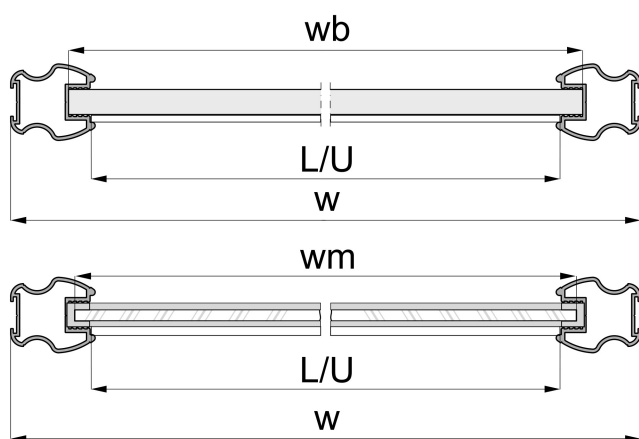

Installation method for fitting 10 mm board (diag. A) and 4 mm mirror or glass (diag. B)

- with handle - with upper profile - with lower profile

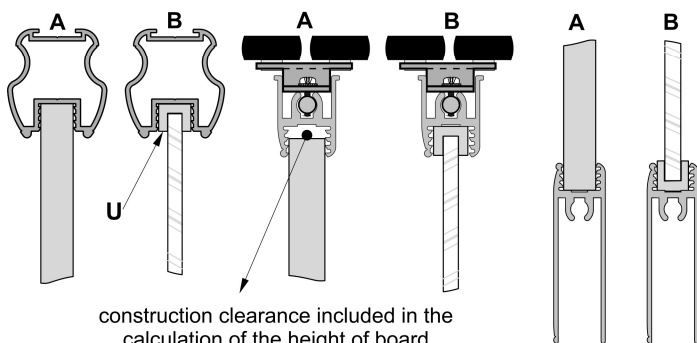**ATTENTION!**

Mirror (4 mm) should be used with a safety backing film. Safety glass (4.5 mm) comprises of two thin layers with a film in-between. Both mirror and glass need fitting gaskets U.

